

# RecPath™ AFX Blue Jay



## ROLL-OUT ACCESS PATHWAY



**Mobi-Mat® RecPath™ is a portable and removable rollout access pathway for pedestrians, wheelchair users, strollers, bicycles and ATVs.**

### ADA-Compliant

Firm, safe and stable, easy for any type of wheelchair, stroller or walker to maneuver on – providing a smooth continuous surface without gaps.

### Environmentally Friendly

Made of 100% recycled polyester, Mobi-Mat® RecPath™ contributes to the environment by utilizing recycled plastics.



RecPath™ channels traffic along designated areas to protect sensitive dunes.

### User friendly Cool and smooth surface

The blue AFX Mobi-Mat® RecPath™ permeable structure remains cool when exposed to very high temperature up to 80°C (176°F), for the benefit of barefoot beachgoers and disabled people.

### Lightweight and Easy Installation

Mobi-Mat® is only 0.27 lbs/sqft, facilitating installation and retrieval of a 50' long section by two persons in ten minutes. Installation and retrieval can be performed by one person when using our Mobi-Roller™.

### Color: Blue Jay

Easily provides dedicated traffic lanes. It is great for visually impaired persons.



### Low Maintenance:

The Mobi-Mat® permeable structure allows sand to filter through, without sinking into the sand. Mobi-Mat® RecPath™ is easily maintained by sweeping any excess sand build up with a broom or with a leaf blower.







**Anchorage included in the kit:**

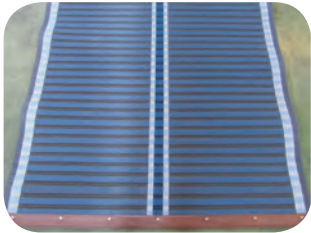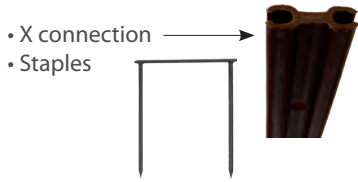

Product Trademark	Material	Grade	Weight (lbs/sqft)	Color	Part Number	Roll Dimensions*			Roll weight (lbs)
						Width (ft)	Length (ft)	Diameter (in)	
Mobi-Mat®	100% Recycled Polyester	AFX	0.27	BLUE JAY	206 483	5	16.5	12	22
					206 484			14	45
					206 485			16	68
					206 486			18	111
					206 488	6.5	16.5	12	29
					206 494			14	58
					206 495			16	88
					206 496			18	144
					206 497			20	176
					206 498			20	176

\* For any customized length, please contact DMS Inc. Ph 973 928 30 40  
Each kit is equipped with end connectors and eyelets to insert the staples provided in the kit.  
Download installation sheet on [www.mobi-mat-chair-beach-access-dms.com](http://www.mobi-mat-chair-beach-access-dms.com)

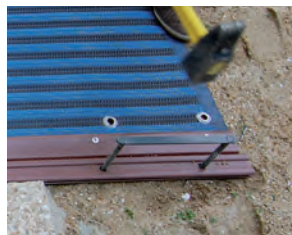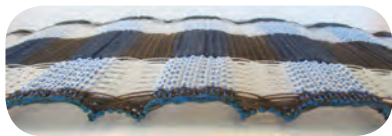

Discover our complete range on [www.mobi-mat-chair-beach-access-dms.com](http://www.mobi-mat-chair-beach-access-dms.com)



**Mobi-Fence™**



**Helipad™**



**VMM™**



**Mobi-Chair®**



[info@mobi-mat-dms.com](mailto:info@mobi-mat-dms.com)  
218 Little Falls Road, Unit 7 - Cedar Grove, NJ 07009 - USA  
Tel. + 1 973 928 3040 - Fax. + 1 973 928 3041  
[www.mobi-mat-dms.com](http://www.mobi-mat-dms.com)

